


# How to Mount IPLax Hexagon Plaques

1. Position a hexagon plaque plate where you want the first plaque and mark the wall through the two holes: (be sure the plate is horizontal)




2. Drill 3/16" holes in the center of each marked hole and insert a plastic anchor into each hole.

4. Insert mounting screws through standoff barrels and screw into plastic anchors:

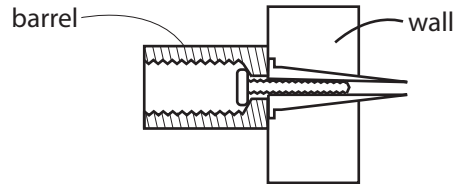

5. Align acrylic plate holes with standoff bases and screw in standoff caps:

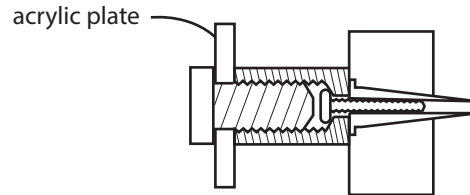

6. Mount the next plaque by positioning the semicircular cutouts on the edge of the jig against the standoff barrels of the first plaque and mark the holes where you want the next plaque. There are holes to position the next plaque above or below the first plaque and holes to position the next plaque at an angle to the first plaque. The jig can be flipped horizontally and vertically depending on where you want the second plaque. After you mark the holes, repeat above.

