


## HOW TO MOUNT IPLAX STANDOFF PLAQUES

All hardware you need to mount the plaque is included.


If you only have one standoff plaque, just place the acrylic plate horizontally against the wall and mark the four holes in the corners of the plate.

Drill 3/16" holes in the center of each circular mark and insert a plastic anchor in each hole, tapping the anchors to firmly secure them in the holes.


Insert the screws through the barrels and into the anchors until the screws are tight:

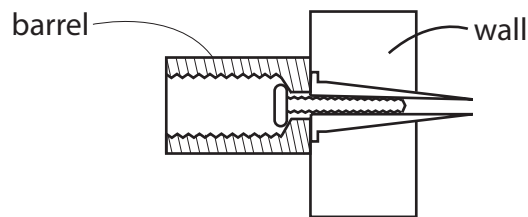

Align the acrylic plate holes with the barrels and screw the caps through the plate holes into the barrels:

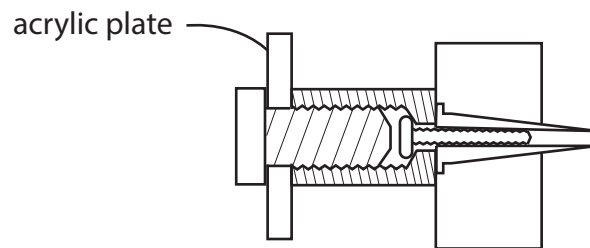

When you order a second plaque (either with the first order or a later order) we will include a free mounting jig to make it easy to align the plaques in relation to each other.. The jig includes cutouts to position against the barrels of a previously mounted plaque and holes to locate the screw holes:.

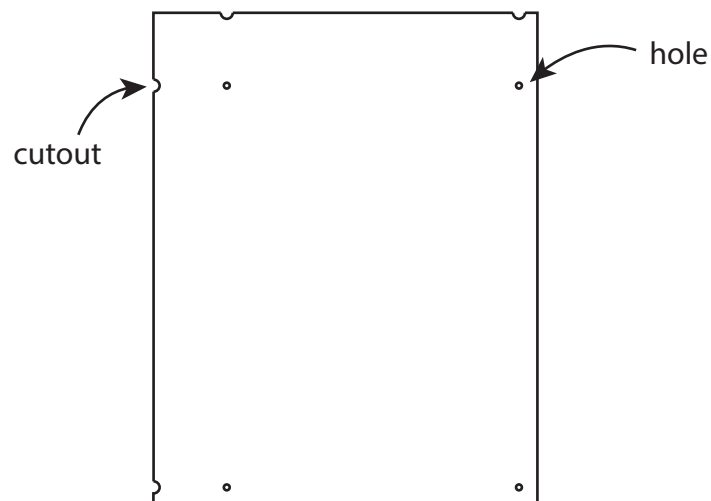

Just position cutouts on the side or end of jig against standoff barrels of the mounted plaque and mark the holes for the new plaque- repeat above. The jig can be flipped horizontally and vertically for use on top, bottom, left and right sides of previously mounted standoff plaque.

If you have questions, just call us at 910-350-3112 or 888-865-3112.